


# Quick Start for Easy Installation

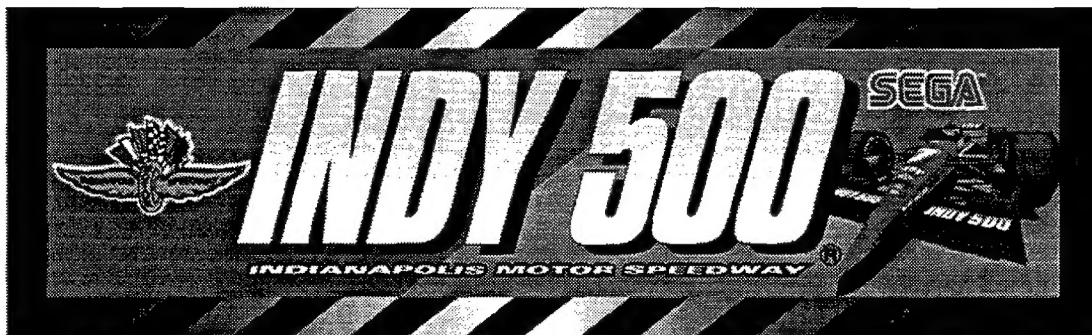

The following information is provided to aid in the installation of the INDY 500 TWIN game. For complete instructions, field service, and maintenance, please refer to the INDY 500 TWIN Owner's Manual.

1. Uncrate and move the INDY 500 TWIN cabinets to their final locations. Use four (4) people to uncrate and move the INDY 500 TWIN cabinets. See the figure for minimum installation dimensions.

2. Inspect the INDY 500 TWIN cabinets inside and out for damage. (The Coin Mech Door key is tied on the Controls. The rest of the keys are hanging behind the Coin Mech Door.) Contact the distributor for instructions if damage is found. Remove the blue trim protector from all silver trim strips.

3. Remove the top two bolts and washers from the right-side cabinet, hang the Cash Box Tower on the right-side cabinet, and attach the right-side cabinet to the Cash Box Tower using the four bolts and washers (some tools in the cash box). Connect the right-side connectors.

4. Attach the left-side cabinet to the Cash Box Tower as in to step 3, using the attached hardware (some tools in the cash box). Connect the left-side connectors.

5. Adjust the six leg levelers on the Cabinet until the Cabinet is level and the two casters are at least 5 mm above the floor. Install the joint plate between the left- and right-side inside leg levelers

6. Install the Billboard (packed in the cabinet) above the Marquee, using the twelve bolts, washers and L-brackets attached to the cabinet and billboard (some tools in the cash box).

7. Connect the linking cable at the back of the cabinet: red to RX, black to TX.

8. Plug in and turn on the INDY 500 TWIN game. The AC cord and switch are located on the lower rear of the cabinet.


8. Adjust the Game Board Default Settings as required. See the back of

this Quickstart Card, and, for more

details, see the INDY 500 TWIN Owner's Manual (shipped in the Coin Box).

9. Set the Control Range ("Volume") Settings. Otherwise, game controls will not work properly. For more details, see the INDY 500 TWIN Owner's Manual (shipped in the Coin Box).

10. Play the INDY 500 TWIN game!

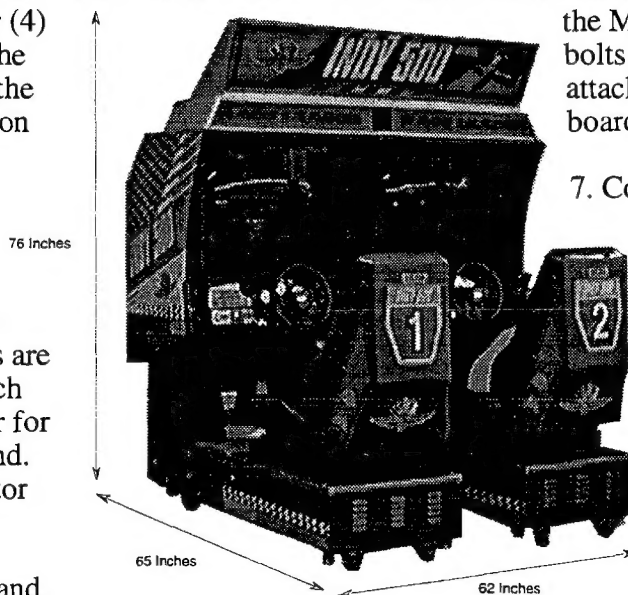


## WARNING!

### NEW FOR INSTALLATION

Control Range ("Volume") Setting Test must be performed for game controls to work properly.  
See Indy 500 Twin Owner's Manual, page 33.



# Recommended Game Settings

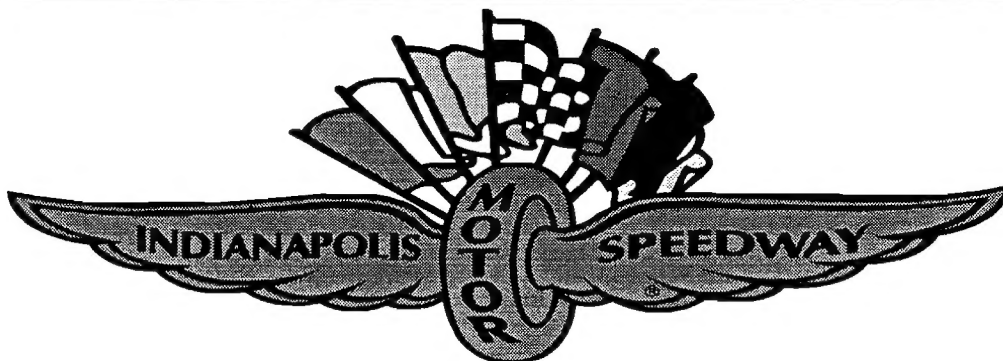

## GAME ASSIGNMENTS

GAME DIFFICULTY	NORMAL
RACE MODE	NORMAL
HANDICAP	ON
ADVERTISE SOUND	ON
COUNTRY	USA
CABINET TYPE	TWIN
NETWORK ID	MASTER/SLAVE
CABINET ID	1/2
ENGINE VOLUME	2
DEFAULT VIEW	4

⇨ EXIT

SELECT WITH SERVICE BUTTON  
AND PRESS TEST BUTTON

## GAME ASSIGNMENTS OPTIONS:

GAME DIFFICULTY, RACE MODE, HANDICAP, ADVERTISE SOUND, ENGINE VOLUME, DEFAULT VIEW: Can be set as desired for game play.

COUNTRY: Set to USA.

CABINET TYPE: Set to TWIN.

NETWORK ID: Set to MASTER for left-hand cabinet of all linked cabinets; set to SLAVE for all other linked cabinets. Set to STAND-ALONE for single cabinet (half of a TWIN configuration).

CABINET ID: Set to 1 for MASTER cabinet; set to 2-8 for all other cabinets. Do not number two cabinets the same number.

## COIN ASSIGNMENTS OPTIONS:

The COIN ASSIGNMENTS menu allows changes to be made to the COIN/CREDIT settings and displays the corresponding relationships between number of coins and number of credits. The manufacturer's recommended default COIN/CREDIT SETTING is #12. See the Indy 500 Twin Owner's Manual for detailed information and instructions.

## COIN ASSIGNMENTS

COIN/CREDIT SETTING #12  
COIN CHUTE #1  
4 COINS 1 CREDIT

COIN CHUTE #2  
4 COINS 1 CREDIT

MANUAL SETTING  
⇨ EXIT

SELECT WITH SERVICE BUTTON  
AND PRESS TEST BUTTON

